



## **Fuel Injector Parts Installation Instructions Delphi**

- Use a small pick to remove the old o-rings. Roll new o-rings on with your fingers.
- To remove the inlet screens screw the supplied screw into the injector until it meets the top of the injector. Turn the screw in another one to two turns then back the screw out about a half to one turn. Grab the screw head with a pair of pliers and pull. The filter should come out with the screw. Some sets require more turns in to the filter to pull it.
- Tap new filters in with a very small hammer and drift punch while holding the injector body firmly in your other hand. Do not place the end of the injector against a solid surface while doing this.
- Cut the pintle caps off with a utility knife. Be very careful not to damage the injector. Heat the new caps with a heat gun or hair dryer and push them into their seated position.
- When you install your injectors in the fuel rail and intake manifold use plenty of lubricant. Motor oil works very well. Install the injectors in the fuel rail first using a turning motion. Its easy tear on o-ring so be careful. I gave you some extras just in case.