



Side Feed

Fuel Injector Parts Installation Instructions

- During the entire process, be very careful not to drop the injector or damage the fragile pintle end of the injector in any manner. Also, do not allow any dirt to enter the injector.
- Use a small pick to remove the old o-rings. Roll new o-rings on with your fingers.
- Remove pintle caps by popping them off with a utility knife or sidecutters. Again, be cautious to avoid damaging the orifice plate or pintle on the end of the injector.
- Use a socket to seat the new pintle cap onto the end of the injector. Heating the caps up with a hair dryer can help them slide on.
- When you install your injectors in the fuel rail and intake manifold use plenty of lubricant. Motor oil works very well. Install the injectors in the fuel rail first using a turning motion. Its easy tear on o-ring so be careful.